3

4

ETACS-ECU
C-417

CAN DRIVE CIRCUIT

INTERFACE CIRCUIT

(CNMH)

(CNML)

17

16

ETACS-ECU
(FUSE 15)

1
B

W

2

(IG1)

COMBINATION METER
C-101

(CANH)

14

(CANL)

15

CAN TRANSCEIVER CIRCUIT

TPMS

CPU

LED DRIVE CIRCUIT

LCD (TPMS)

KOS-ECU

1
C

1
D

<T> (Y-P)

<T> (R-W)

<T> (B-L)

<T> (R-L)

11

22

5

16

J/C (CAN5)
C-26

9

20

ETACS-ECU
(FUSE 11)

1
A

R

16

DIAGNOSIS CONNECTOR
C-220

4

5

B

B

2

CAN DRIVE CIRCUIT

INTERFACE CIRCUIT

(CANH)

(CANL)

19

18

<T> (W-L)

<T> (B-Y)

4

13

J/C (CAN4)
C-34

8

17

9

18

<T> (Y)

<T> (BR)

<T> (R-W)

<T> (Y-P)

1

10

J/C (CAN3)
C-27

8

17

<T> (R-B)

<T> (G-R)

15

16 C-126

<T> (R)

<T> (B)

6

14

1

10

5

14

J/C (CAN1)
C-29

3

12

<T> (R-B)

<T> (G-R)

11

10

ASC-ECU
A-103

CANH

CANL

INPUT SIGNAL

·FRONT WHEEL SPEED SENSOR

·REAR WHEEL SPEED SENSOR

PHEV-ECU C-38

CNAH

CNAL

17

16

<T> (Y-P)

<T> (R-W)

A-103

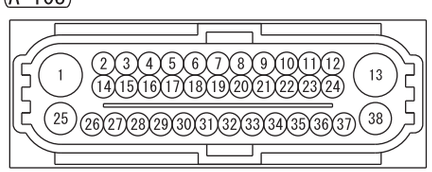

C-26

MU801515



C-27



C-29



C-417



C-34



C-38

(MU803784)



C-101



C-126



C-220

MU803797

FRONT SIDE



Wire colour code
B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue
BR : Brown O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver

HKAR0E94BC