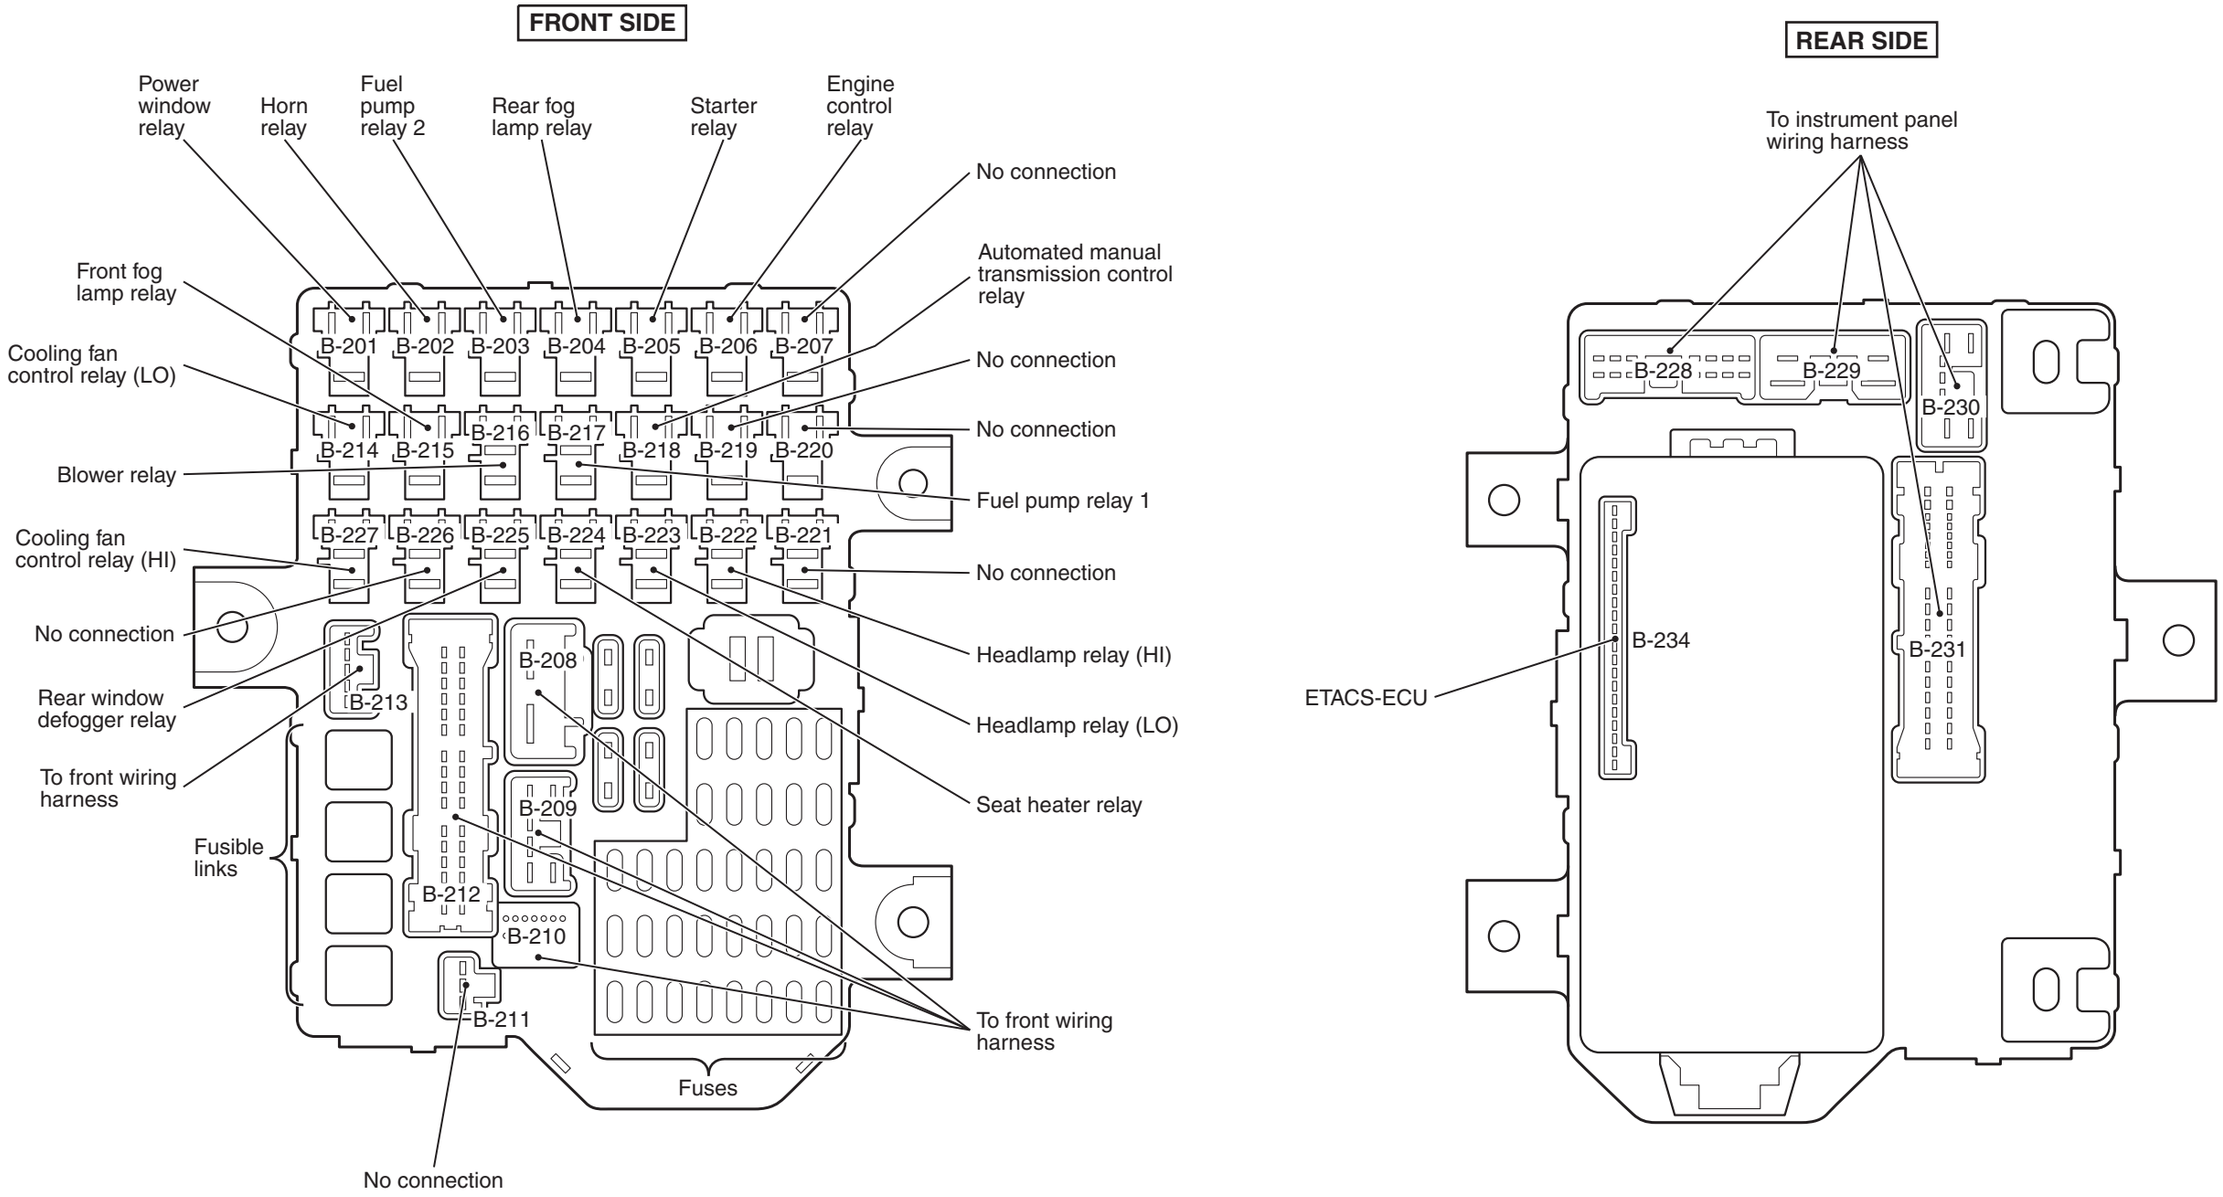
FRONT SIDE
Power window relay
Horn relay
Fuel pump relay 2
Rear fog lamp relay
Starter relay
Engine control relay
No connection
Automated manual transmission control relay
No connection
No connection
Fuel pump relay 1
No connection
Headlamp relay (HI)
Headlamp relay (LO)
Seat heater relay
To front wiring harness
Front fog lamp relay
Cooling fan control relay (LO)
Blower relay
Cooling fan control relay (HI)
No connection
Rear window defogger relay
To front wiring harness
Fusible links
No connection
B-201
B-202
B-203
B-204
B-205
B-206
B-207
B-214
B-215
B-216
B-217
B-218
B-219
B-220
B-227
B-226
B-225
B-224
B-223
B-222
B-221
B-213
B-208
B-209
B-212
B-210
B-211
Fuses
REAR SIDE
To instrument panel wiring harness
B-228
B-229
B-230
B-234
B-231
ETACS-ECU