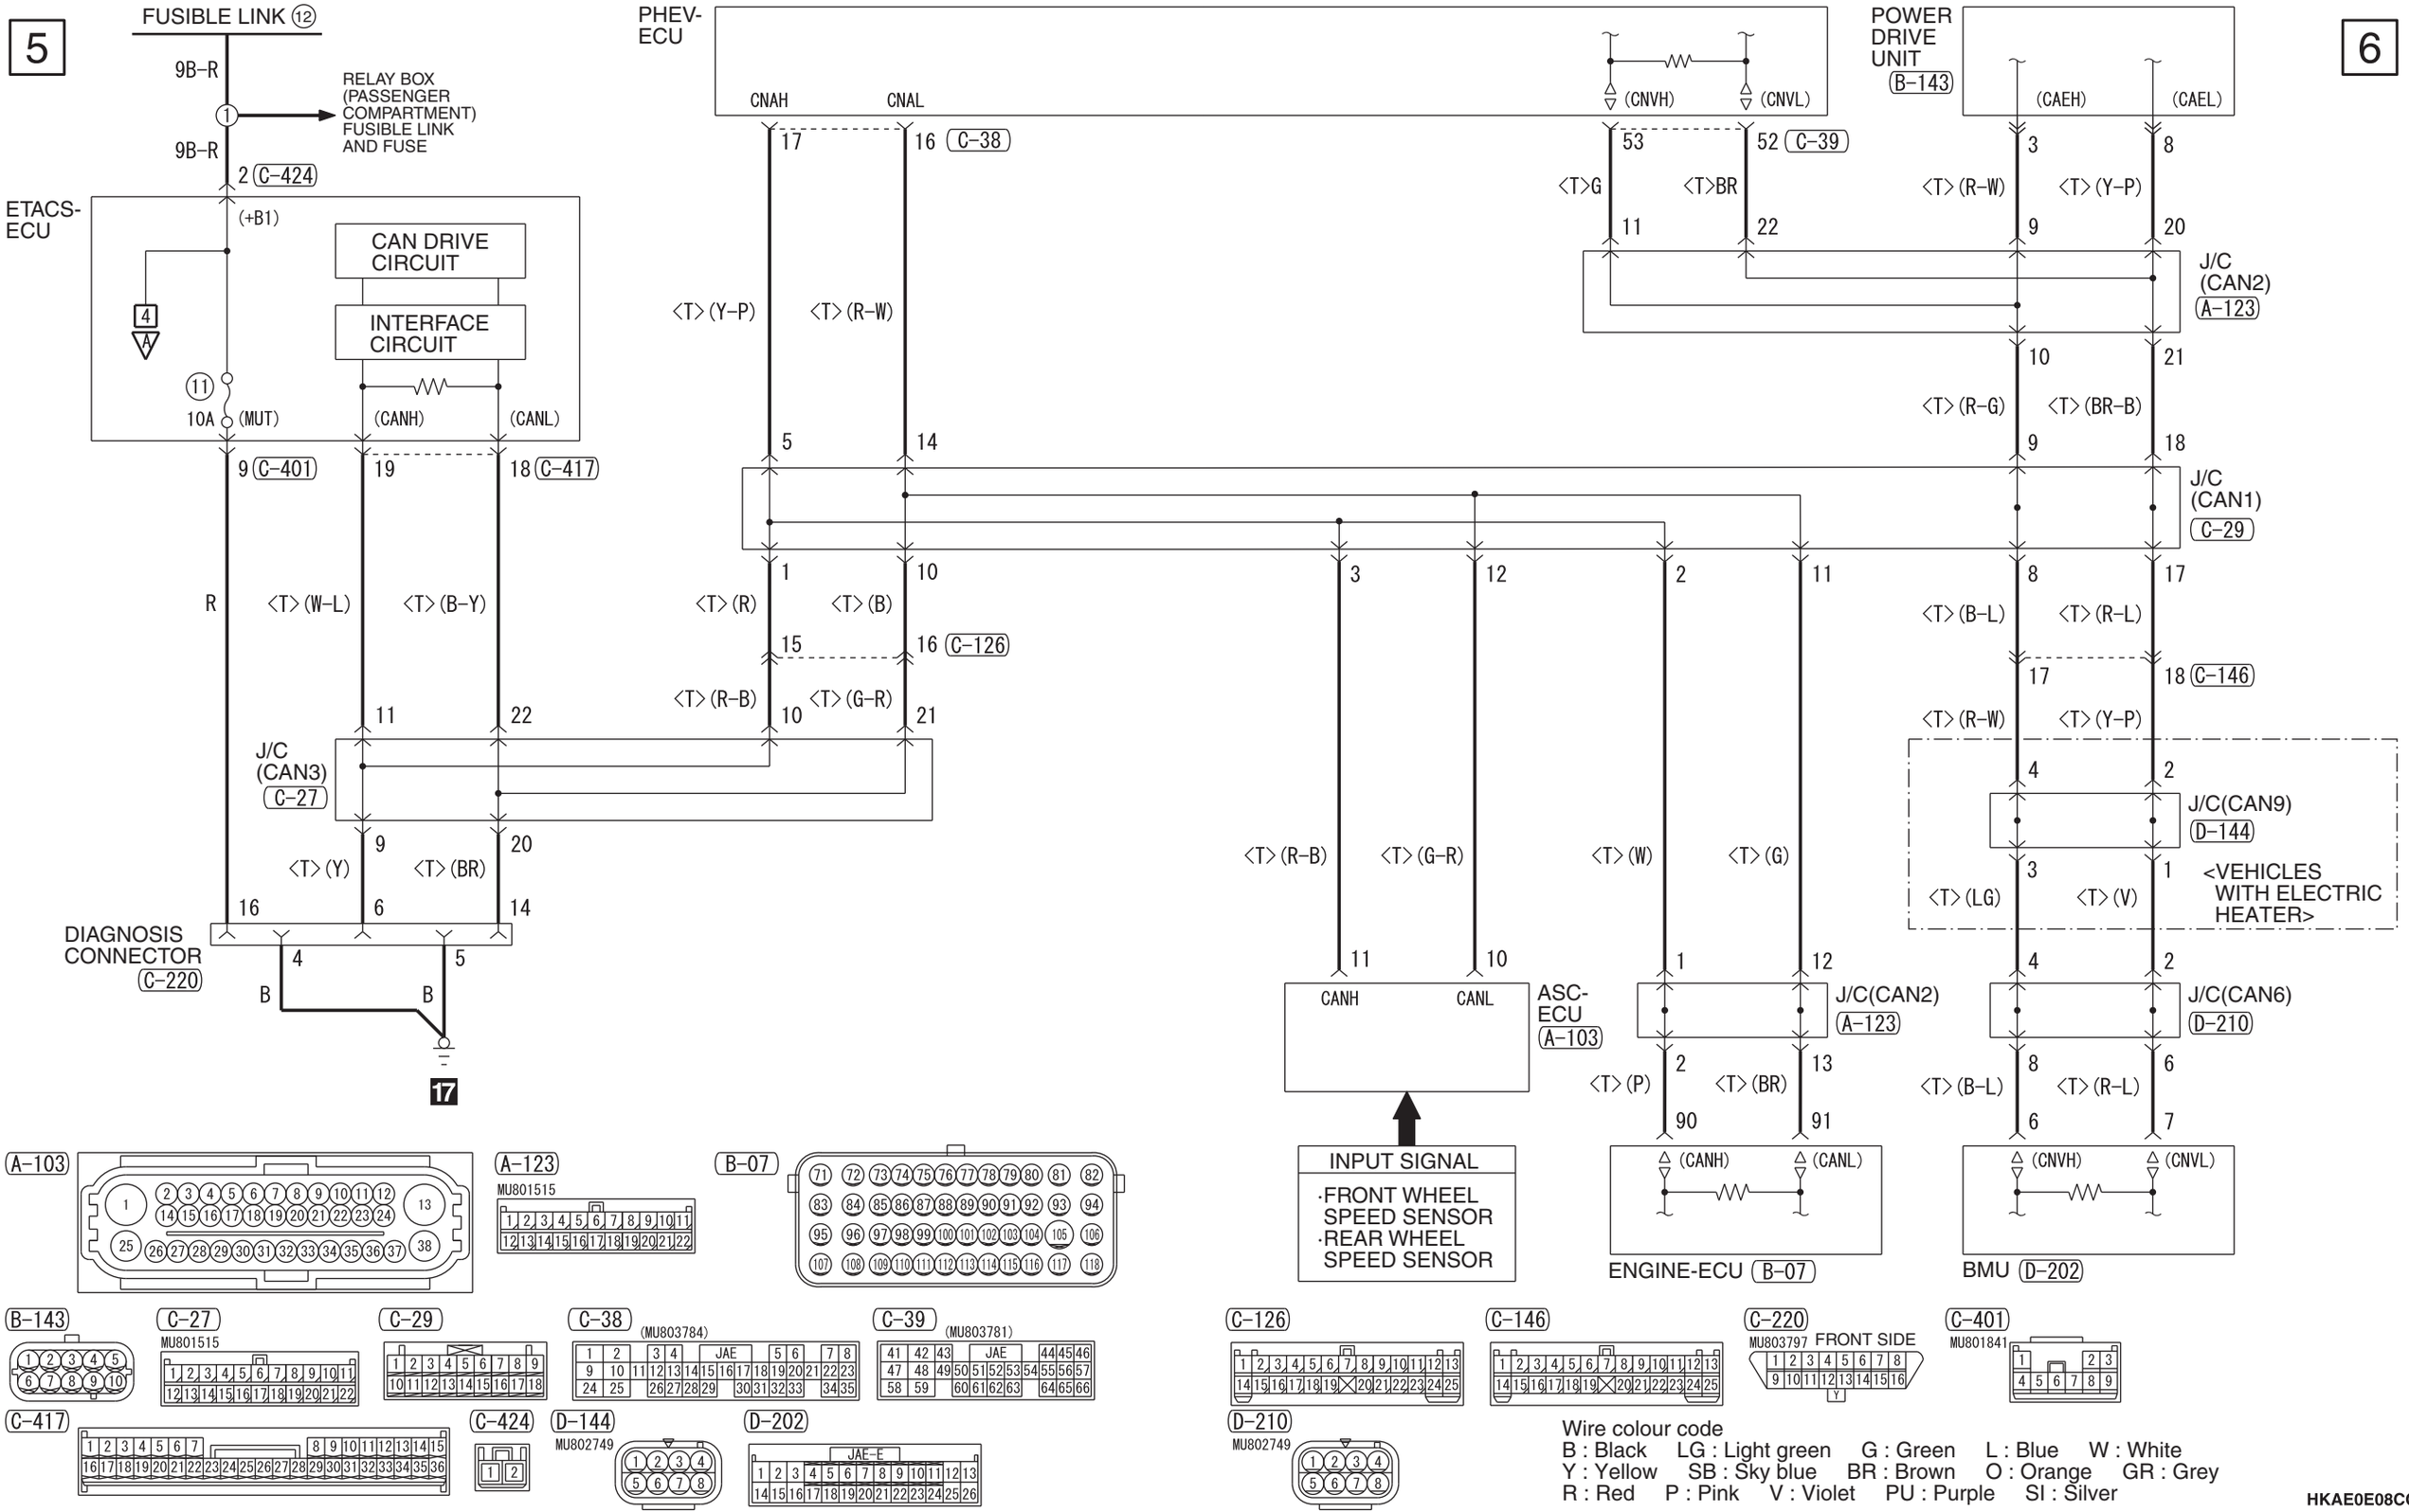
5
6
FUSIBLE LINK 12
9B-R
RELAY BOX (PASSENGER COMPARTMENT) FUSIBLE LINK AND FUSE
2 C-424
ETACS-ECU
(+B1)
CAN DRIVE CIRCUIT
INTERFACE CIRCUIT
10A (MUT)
(CANH)
(CANL)
9 C-401
19
18 C-417
PHEV-ECU
CNAH
CNAL
(CNVH)
(CNVL)
16 C-38
52 C-39
POWER DRIVE UNIT B-143
(CAEH)
(CAEL)
J/C (CAN2) A-123
J/C (CAN1) C-29
16 C-126
18 C-146
J/C (CAN3) C-27
J/C(CAN9) D-144
<VEHICLES WITH ELECTRIC HEATER>
DIAGNOSIS CONNECTOR C-220
ASC-ECU A-103
CANH
CANL
INPUT SIGNAL
·FRONT WHEEL SPEED SENSOR
·REAR WHEEL SPEED SENSOR
J/C(CAN2) A-123
ENGINE-ECU B-07
J/C(CAN6) D-210
BMU D-202
A-103
A-123
MU801515
B-07
B-143
C-27
MU801515
C-29
C-38
(MU803784)
JAE
C-39
(MU803781)
C-126
C-146
C-220
MU803797
FRONT SIDE
C-401
MU801841
C-417
C-424
D-144
MU802749
D-202
JAE-E
D-210
MU802749
Wire colour code
B : Black LG : Light green G : Green L : Blue W : White
Y : Yellow SB : Sky blue BR : Brown O : Orange GR : Grey
R : Red P : Pink V : Violet PU : Purple SI : Silver
HKAE0E08CC